



### **MPS Pressure Sensor Instructions**

- 1-0600 = 0-30 psi**
- 1-0601 = 0-60 psi**
- 1-0597 = 0-100 psi**
- 1-0598 = 0-150 psi**
- 1-0599 = 0-1500 psi**

The pigtail wire colors are as follows:

Red = sensor + 5vdc  
Black = sensor ground  
White = sensor signal

All sensors have a linear voltage output of .5 - 4.5 volts in the range of the sensor.

Do not mount sensors directly to the engine, as damage will result from vibration. Always remote mount pressure sensors away from vibration. Use a small amount of Teflon thread sealer on the threads when installing. Do not over tighten sensors.

If you have any more questions we have a Frequently Asked Questions page at our web site as well as the telephone tech support. Thank you for your purchase of this MPS product. All products sold by MPS are for use at closed course competition events and not for use on public streets or highways.

**Phone: 321.972.8282 – Fax: 321.972.5123**  
**380 Orange Lane – Casselberry, Florida 32707**