

NOTICE: IT IS RECOMMENDED THAT THIS PRODUCT BE INSTALLED BY A QUALIFIED TECHNICIAN!

Remove rear wheel (consult the owner's manual). Once the rear wheel is off, remove the stock cush drive unit then pry the old cush drive rubbers out with a small pry bar. Apply grease on the heavy duty cush drives. In area noted See Fig. #1 and #2

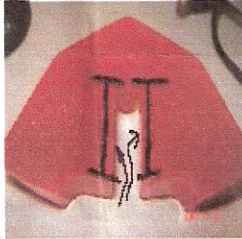


Fig. #1



Fig. #2

Insert new heavy duty cush drives where the stock units were. Push at the X in Fig. #3 (See Fig. #3) they should fit tight, this is OK. ***Notice: If you have chrome plated rims, the cush drive mounting holes might need to be reamed out slightly.

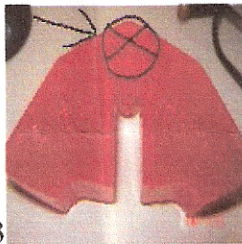


Fig. #3

Reassemble. Pay special attention that the sprocket drive unit seats all the way into the wheel. Use a rubber mallet if necessary or step on it with your foot. Install rear wheel on the motorcycle. Enjoy your ride!

Please email any questions to email: senseiperformance@tampabay.rr.com