

## SCH3013 ENGINE KILL WIRING HARNESS

**For motorcycles with 12 volt wire on left side of coil harness ONLY!**




Locate your factory coils. Check each coil for wire colors going to them. Generally the positive wires are all one color and the negatives for each cylinder are all different colors or have a different color stripe. For the SCH3013, you must make sure that the positive wire is connected to the red wire. You may need to trim some of the electrical tape to see them clearly. Example A.

Connect SCH3013 harness to factory harness and coils. Example B

Run all 4 black wires to the MPS Kill Box. Cut them to length. Then, strip the wire to attach the male terminals to each of them. Be sure to use the proper crimping tool. Example C

Finally, insert the male terminal into the female connector. Example D. Repeat for all 4 wires and plug the female connector into the male connector on the MPS Kill Box.

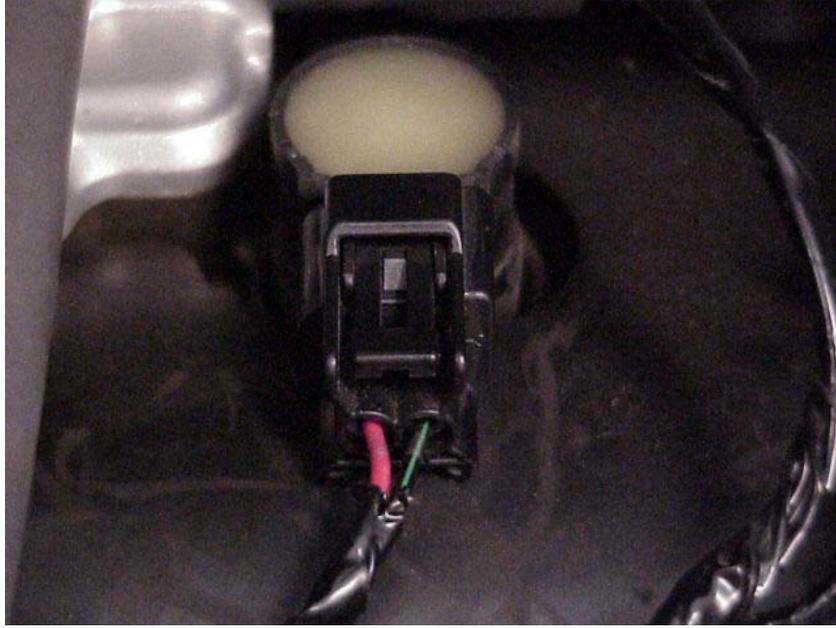


A



B



C

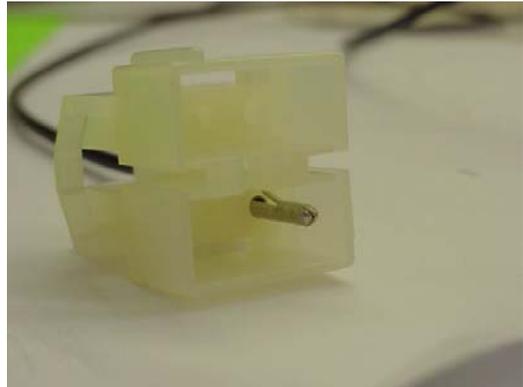

D